

INSTALLATION INSTRUCTIONS

Item#779 (New. 12/05/2011)

READ AND SAVE THESE INSTRUCTIONS

WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER.
AVERTISSEMENT! COUPER LE COURANT AU NIVEAU DES FUSIBLES OU DU DISJONCTEUR.

ASSEMBLING THE FIXTURE (Fig. 1)

1. Carefully remove the fixture from the carton and check that all parts are included as shown in the illustration.
2. Shut off the power at the circuit breaker (**avertissement! couper le courant au niveau des fusibles ou du disjoncteur**) and remove the old fixture including the mounting hardware.
3. Secure the upper column assembly (F) to the hex coupling (E). Turn the arms to the correct position.
4. Place the bottom of the top arms (B) through the square pin (D). Attach the top arms (B) to the upper column assembly (F) with ball screws (A).
5. Attach the bottom arms (N) to the fixture body (K) with ball screws (M).
6. Hook the crystal drops (J) onto the leaf (I).
7. Secure the finial (L) onto the fixture body (K).

HANGING THE FIXTURE (Fig. 2)

IMPORTANT: For a safe and secure installation, these fixtures must be installed by means of support that is independent of the outlet box. (Note – For heavy fixtures hickey and cable lock are provided, other required hardware to be supplied by installer)

SUGGESTED INSTALLATION:

8. Provide a 1/4 IPS pipe with one end securely mounted to a beam or a structural member. The other end should protrude through the center of the outlet box as shown.
9. Assemble the ceiling loop, nipple, nuts and hickey to center 1/4 IPS support pipe and adjust overall length to allow the ring to hold the canopy flush to the ceiling. When the adjustments have been completed, secure the three nuts, as shown.
10. Attach the chain to the fixture loop, by measuring determine correct number of links needed for proper hanging height. Use a pair of chain pliers to open upper end link of the chain, and discard un-wanted chain. Slip the lock collar and canopy over the upper end of the chain and lift the fixture to attach to the Ceiling Loop, close the quick link.
11. Lace the fixture wires, ground and safety cable through the chain and loop, exiting through the side of hickey. Run cable through the top of the outlet box and secure to strain relief bushing.

CONNECTING THE WIRE (Fig. 3)

12. At this point, connect the electrical wire as shown in (Fig.3), making sure that all wire connectors are secured. If your outlet has a ground wire (green or bare copper), connect the fixtures ground wire to it. Otherwise, connect the fixture ground wire directly to the outlet box.
13. Tuck these wire connections neatly into the ceiling junction box and then raise the canopy all the way to the ceiling. Raise the lock collar and thread onto ceiling loop protruding through canopy.

FINISHING THE INSTALLATION (Fig.1)

14. Place the candle sleeve (G) over the socket (H). Install the light bulb(s) (not included) in accordance with the fixture's specifications. (**DO NOT EXCEED THE MAXIMUM WATTAGE RATING!**). (**NE PAS DEPASSER LA PUISSANCE NOMINALE MAXIMALE!**) Clip the Fabric shade(s) (C) onto the bulb(s).

Your installation is now complete. Return power to the junction box and test the fixture.

Note: Illustration (Fig. 1) on this manual is for installation purposes only. It may or may not be identical to the fixture purchased.

Fig. 1

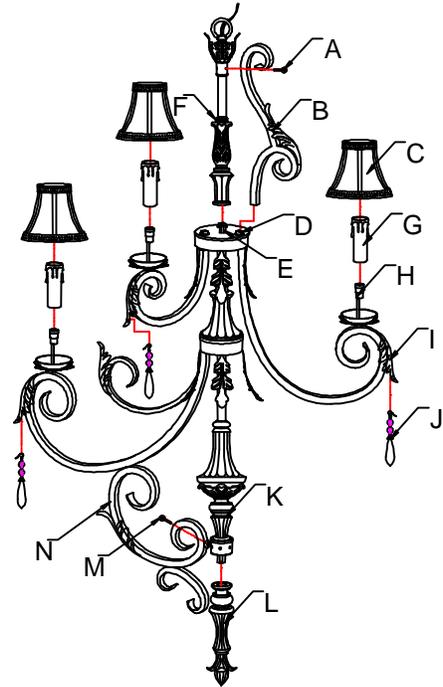


Fig. 2


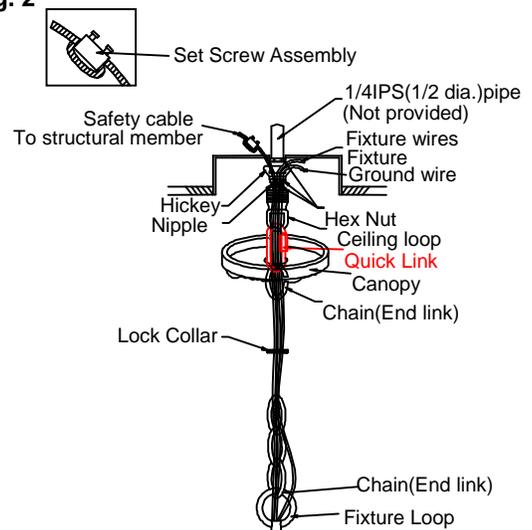


Fig. 3



Notice: It is important to use proper chain pliers (not included) To OPEN and CLOSE the chain included with this fixture. Do not open them with other tools that may twist or stress the chain links. It is important to use proper chain pliers like the ones shown in the diagram.

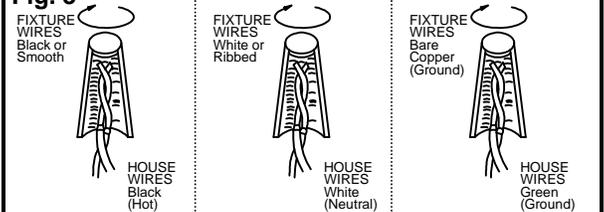

LA-2089E