



STOWBOARD®
THE NEXT STEP IN BOARD EVOLUTION

MANUAL



PRODUCED BY PRONTO SPORTS INC.

1887 Station Parkway N.W.

Andover, MN 55304 USA

Tel. 763-755-4882 Fax 763-755-4883

www.stowboard.com www.prontosports.com



is a registered trademark of Pronto Sports Inc.

ENGLISH

ENGLISH

SMART BOARDING

CHECK THIS OUT

STARTING OUT

RULES OF THE ROAD

WARRANTY

STOW | UNSTOW

PARTS

TOOL SET

MAINTENANCE

STOWBOARD®
THE NEXT STEP IN BOARD EVOLUTION


SMART BOARDING

Always think SAFETY first. Riding the STOWBOARD®, like any sport involving motion, will also involve risk. To reduce your risk of injury, always wear your protective gear. STOWBOARD® retailers also offer a wide range of protective gear made for sports like stowboarding. Please check with retailer to see which protective gear is right for you.

CHECK THIS OUT

Always check your STOWBOARD® before riding it.

- Check to see if the wheels and bearings are properly secured. The **wheel axle screws** (see fig. A & B) should be tight and the wheels should spin freely.
- ALWAYS wear your protective gear.
- Check the **cable** (see fig. B) for fraying. Do not ride the STOWBOARD® if the **cable** (see fig. B) is frayed, contact your STOWBOARD® dealer for further information.
- Check that all parts are properly locked into place before riding.

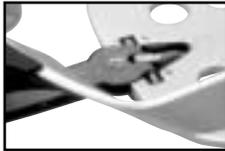

cable connector pin (see Fig. A)



locking/unlocking tail button (see Fig. A)

- Start slowly on a smooth, level surface that is free of debris.

STARTING OUT

Time to get rollin' on your new STOWBOARD®.

- Unfold board and lock into position (see unstow instructions).
- Choose your dominate foot, which-ever feels best, and place it on the front, **main deck** (see fig. A).

- Push off with the other foot to get rollin'.
- Your back foot rests on the **tail/rear assembly** (see fig. A) when riding for added steering and control.
- For more tips and information on the STOWBOARD® visit www.stowboard.com.



RULES OF THE ROAD

- Keep STOWBOARD® out of water, dirt and sand.
- Avoid using on uneven surfaces.
- Use only in safe areas to avoid traffic and pedestrians.
- Children under 10 years of age should be supervised at all times.
- Always wear protective gear including: helmet, knee pads, elbow pads and wrist guards.
- Learn slowly until you feel stable on the STOWBOARD®.
- Keep STOWBOARD® away from steep inclines and hills.

LIMITED WARRANTY


The STOWBOARD® is warranted by Pronto Sports Inc. to be free from defects in material and workmanship. If found defective from manufacturing, Pronto Sports Inc. will replace or repair the product under the following terms:

1. Warranty will be in effect 90 days from the date of purchase.
2. Proof of purchase along with date must be provided.
3. Warranty is good for defects in material or workmanship only. Does not include normal wear and tear on the product. Contact the retailer where you purchased your product for assistance.
4. This warranty extends to the original retail purchaser only, and is not transferable.
5. STOWBOARD® can not be returned due to worn wheels, pads, bearings, or damage from abusive use.


UNSTOW - Unfolding the board into riding position.




STEP 1 - STOWBOARD® in the stowed position.

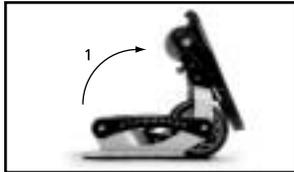

STEP 2 - Lift **tail/rear assembly** in a clockwise motion/direction.

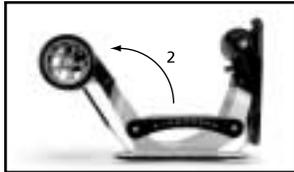


STEP 3 - Lift **front wheel assembly** in a counter clockwise motion/direction.

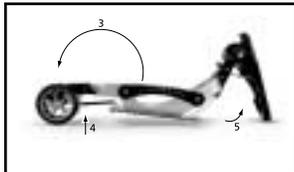

STEP 3 - 4 - Continue to open the **front wheel assembly**, making sure the **cable connector pin** stays on top of **main deck**. Lock **cable connector pin** into slot on **main deck**.

STEP 5 - Rotate **tail/rear assembly** counterclockwise.

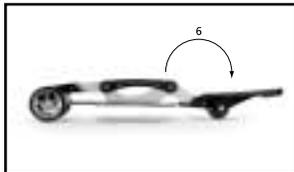

STEP 6 - Continue to unfold the **tail/rear assembly** counterclockwise and lock **tail/rear assembly** into place.

STOW - folding the board into its stowed position.



STEP 1 - Unlock the **tail/rear assembly**, by releasing the **rear locking connector button**.



STEP 2 - Fold the **tail/rear assembly** clockwise.



STEP 3 - Lift the **cable connector pin** out of the main deck slot.



STEP 4 - Fold the **front wheel assembly** into the **main deck**.



STEP 5 - Fold the **tail/rear assembly** into the **main deck**.

FIGURE A (fig. A)



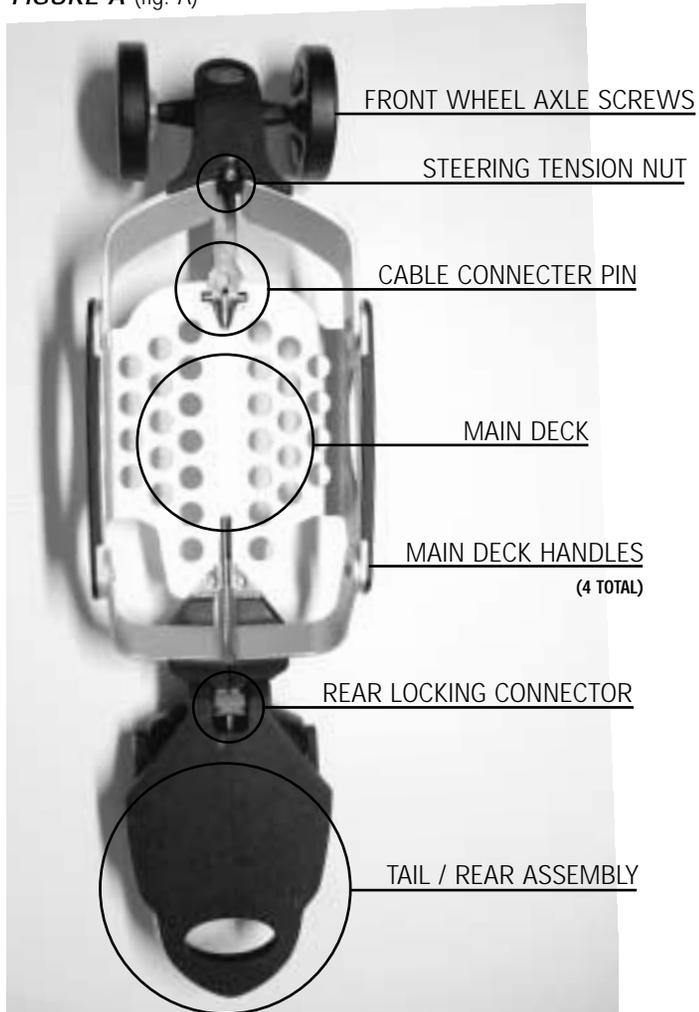


FIGURE B (fig. B)

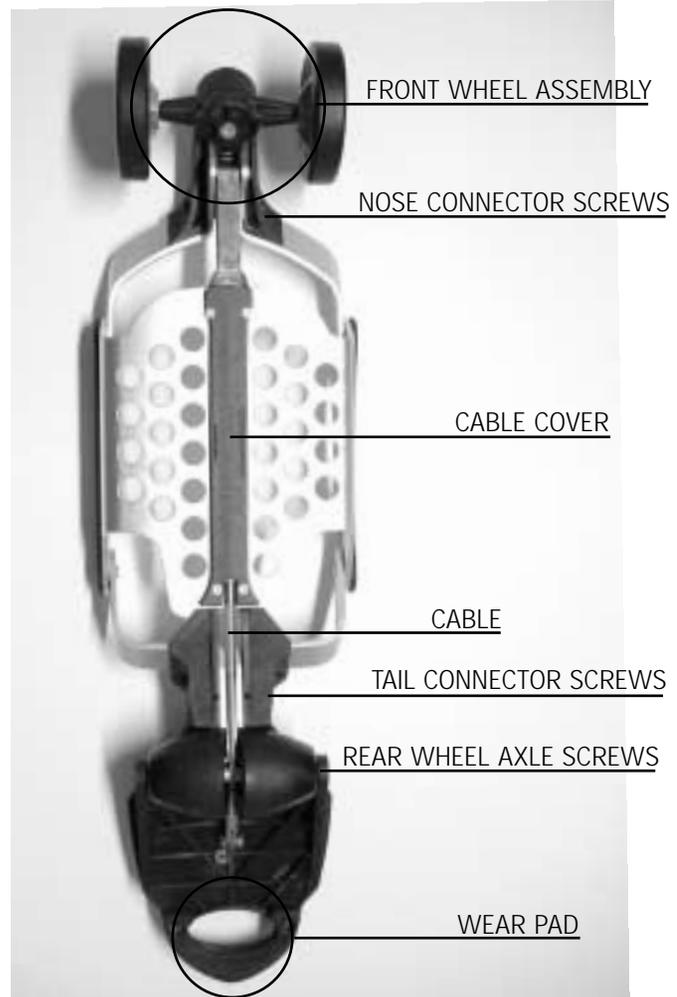

STOWBOARD® TOOL SET - Refer to Figures A and B for parts location on the STOWBOARD®

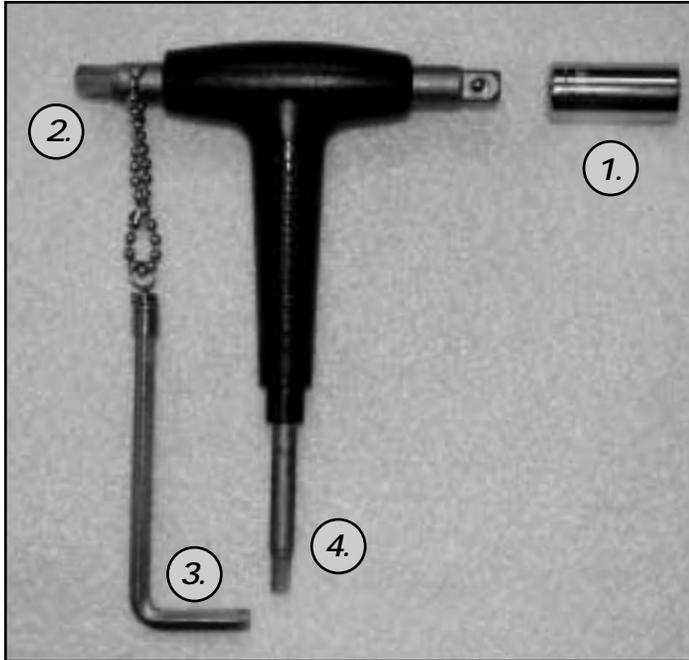

1. ADJUSTMENT SOCKET 8mm

For use with:

- Steering Tension Nut

2. ALLEN KEY 6mm

For use with:

- Main Deck Handles

3 AND 4 - ALLEN KEYS 4mm

For use with:

- Wheel Axles Screws
- Tail Connector Screws
- Nose Connector Screws
- Cable Cover

MAINTENANCE

- Always check wheels, nuts and bearings before each use.
- If wheels are not working normally, stop riding and inspect the wheels and bearings. If wheels are loose, tighten them with the enclosed STOWBOARD® tool set.
- Check all parts for wear and tear. Replace any part if it is worn or does not function correctly. See your STOWBOARD® retailer for details. For the closest stowboard dealer please visit www.stowboard.com.
- Failure to properly follow these recommended safety precautions could result in serious injury. Board smart and use common sense.
- Do not use the STOWBOARD® in any way that would violate commonly accepted safety practices or laws. ALWAYS wear your protective gear.
- The variable steering control screw can be adjusted to increase or decrease the front steering tension according to the weight of the user. Use the enclosed STOWBOARD® tool set to do this properly.
- In the unfolded position, make sure the **tail/rear assembly** is locked into place and the front **cable connector pin** is inserted properly into the slot on the top of the **main deck**. (see fig. A for part locations).

